GB AWZ 234

6th Sense:

The double sensor technology is designed to ensure optimum drying results with minimum energy consumption.

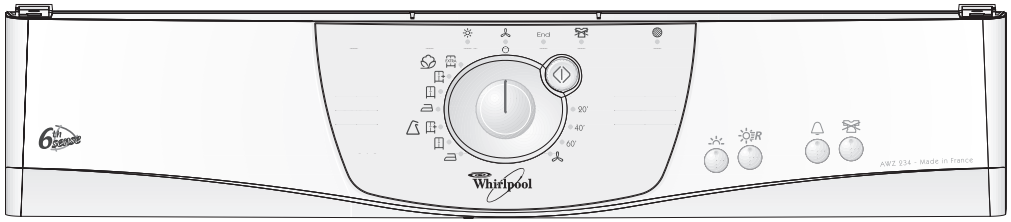

QUICK REFERENCE GUIDE

please also carefully read: the Instructions for Use and Installation Manual.

Programmes \ Options		Gentle Reduces Drying Intensity (recommended for delicate items)	Rapid Shortens Drying Duration (recommended for small items)	Buzzer Signals/Sounds end of Drying Cycle at Intervals	Anti-Crease Prevents laundry from creasing	Indicative Drying Time – Spin Speed Washing Machine rpm 800	rpm 1000	rpm 1200	Max Load Kg
Cotton Max. 5kg	Extra dry	✓	✓ max 3.5 kg	✓	✓	85′ 120′	–	70′ 100′	3.5 5.0
	Cupboard dry plus	✓	✓ max 3.5 kg	✓	✓	80′ 110′	–	60′ 90′	3.5 5.0
	Cupboard dry*	✓	✓ max 3.5 kg	✓	✓	65′ 90′	–	50′ 75′	3.5 5.0
	Iron dry*	✓	✓ max 3.5 kg	✓	✓	55′ 75′	–	40′ 65′	3.5 5.0
Easy care Max. 2.5kg	Cupboard dry plus	✓	–	✓	✓	30′ 40′	20′ 35′	–	1.0 2.5
	Cupboard dry*	✓	–	✓	✓	20′ 35′	15′ 30′	–	1.0 2.5
	Iron dry	✓	–	✓	✓	15′ 30′	10′ 25′	–	1.0 2.5
Airing	**Laundry is aired for 30 minutes without heating**	–	–	✓	✓	–	–	–	–
Time Programmes 20' 40' 60'	**Completes drying or dries single items. (Suitable for all fabrics)**	–	–	20' 40' 60'	20' 40' 60'	–	–	–	–

Start Pause	**Starts the drying cycle. The indicator lamp lights up when the dryer is on.**
Anti-Crease Protection	**Re-distributes laundry in the drum.** When the Anti-Crease option is selected and laundry has not been taken out, an anti-crease cycle is activated for 12 hrs. If the option is selected with "Start Delay", the cycle operates both before and after the dring cycle.
Filter	The indicator lamp lights up when the filter needs cleaning. **Clean the filter at the end of every cycle.**
PROGRAMME SEQUENCE INDICATORS	
Drying Airing End End Anti-crease	**The programme sequence indicator lamps show the status or the progress of the drying cycle.**

Gentle and **Rapid** cannot be selected together. **Buzzer** and **Anti-crease** cannot be selected together.

* Test programmes according IEC 61121.

5019 100 18191

PREPARING THE LAUNDRY

1. Check that all fastenings are closed and that pockets are empty.
2. Turn the articles inside out.
3. Place laundry loosely in the drum to make sure it doesn't become tangled.

Sort laundry as follows:

A) By care symbols (on the collar or inside seam):

Suitable for tumble drying

Tumble drying with reduced drying intensity only

Do not tumble dry

B) By amount and thickness/weight
Whenever the load to be dried exceeds dryer capacity, separate laundry according to weight (e.g. towels from thin underwear).

C) By type of fabrics
Cotton/linen: Towels, cotton jersey, bed and table linen made of cotton or linen.
Synthetics/Easy Care: Blouses, shirts, overalls, etc. made of polyester or polyamide, as well as cotton/synthetic mixes.

D) By drying level
- Sort into: iron dry, cupboard dry, etc.

Do not tumble dry: Woollens, silk, nylon stockings, delicate embroidery, fabrics with metallic decorations, bulky items such as sleeping bags, etc.

Important: only use specific indicated dryer-safe additives and rinse items that have been treated with stain remover thoroughly in plenty of water before drying. **Only use specific indicated dryer-safe plastic items** and **never** dry **rubber or articles contaminated with vegetable oil** in the dryer.

SELECTING A PROGRAMME AND OPTIONS

Programme and Options:
- To select a programme, turn the programme selector knob.
- To select an option (if available), press the corresponding button. The indicator lamp above the botton confirms that a selection has been made. An alarm sounds if an incorrect selection is made (incompatible options).
- Press the button again to cancel the option.

STARTING AND COMPLETING A PROGRAMME

1. Having selected the desired programme and options, press the Start button.
   If the laundry is not removed at the end of the drying cycle, an automatic anti-crease cycle will operate for maximum 60 min. The drum rotates at regular intervals, preventing the laundry from creasing.
2. On completion of the programme, set the programme selector knob to position "0".
   The dryer indicator lamp "Start/Pause" switches off.

CHANGING A PROGRAMME

When changing the programme during the drying cycle, the dryer stops. The indicator lamp of the Start/Pause flashes.

To operate the new programme, press the Start/Pause button again.

INTERRUPTING A PROGRAMME

To interrupt the dryer during operation

1. Set the programme selector knob to "Airing".
2. Press the Start button.
   Wait at least 5 minutes before opening the door to allow the dryer to cool down.
   For your safety the programme stops automatically if you open the door.
3. To restart, after door opening, close the door and press the Start/Pause button again.

FILTER

Clean the lint filter at the end of every drying cycle:
1. Open the door.
2. Pull the filter upwards.
3. Remove lint using a soft brush or your fingertips.
   Push the filter firmly back into place.

BUILT-IN INSTALLATION

To built in the dryer

1. It is reccommended to not remove the work-top.
2. Connect the dryer to an external ventilation system in order to prevent steam from damaging your furniture during the years.

TROUBLESHOOTING GUIDE

If a fault occurs, before contacting our After-Sales Service, make the following checks to try and remedy the problem:

Drying takes too long / laundry is not dry enough:
- Was the correct programme selected?
- Was the inserted laundry too wet (Washing machine spin speed less than 800 rpm)?
- Is the lint filter dirty (filter indicator lamp on)?

The dryer does not operate:

(following a power failure and/or interruption to the mains supply, always press the Start button).
- Is the plug properly inserted into the mains electricity socket?
- Is there a power failure?
- Has the fuse blown?
- Is the door well closed?
- Has the programme been selected?
- Has the **Start/Pause** button been pressed?

Lint filter indicator lamp light on:
- Is the lint filter clean?
- Is the vent hose blocked?

AFTER-SALES SERVICE

If, after carrying out the above checks the malfunction persists or appears again, turn the dryer off and call our After-Sales Service (refer to guarantee).

Please specify:
- the nature of the fault.
- the dryer type and model.
- the service code (the number after the word Service on the adhesive rating plate) on the right-hand side when the door is open.
- your full address and phone number.

SERVICE 0000 000 00000